


## ENGINE GASKET SET Figure 1

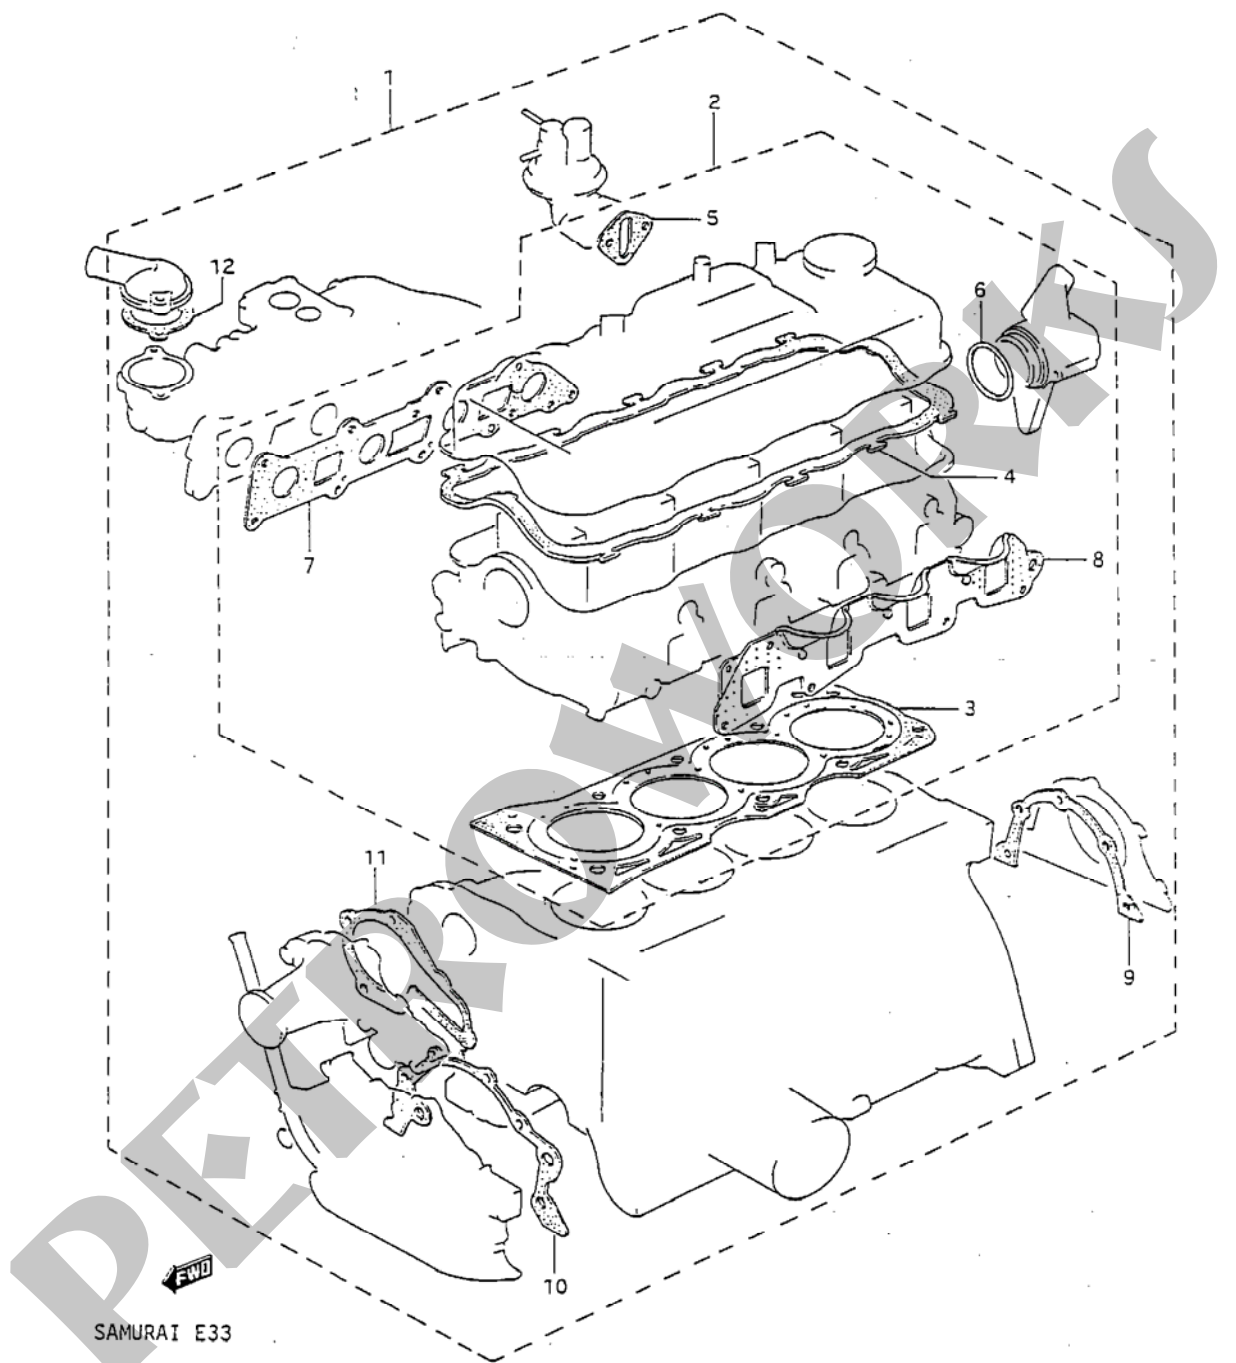

### **Petroworks Maintenance Tip**

The cylinder head cover gasket (more commonly known as a valve cover gasket) and head cover seal washers should be replaced every 30,000 miles or whenever the valves are serviced or adjusted.

The distributor case O-ring (which can leak a surprising amount of oil when bad) should also be replaced every 30,000 miles or whenever the head is serviced.